



**\*\* IMPORTANT:** These are specific installation steps to our product. However, it is important to follow the guide and methods of the installations according to the existing building code requirement for each particular installation.


In order to not damage the product, a minimum knowledge of installation of windows and doors is required to perform the finishing adjustments presented in this guide. These adjustments do not rectify an incorrect installation.

Products from our puRE line must be installed using a laser level. \*\*\*

1. Open the shutter to access the installation holes
2. Attach the window to the frame of the house, screwing in the pre-drilled holes, with # 10 screws requiring a minimum length of 3 " or more depending on the space between the background nailing and the window.
3. Adjust the shutter so that it is set square to the box frame


a) Top and bottom adjustment for left / right shutter:

Locate on hinges the hexagonal recess to insert a 3mm Allen key. Turn in clockwise direction to adjust the flap right or counterclockwise to adjust it to the left

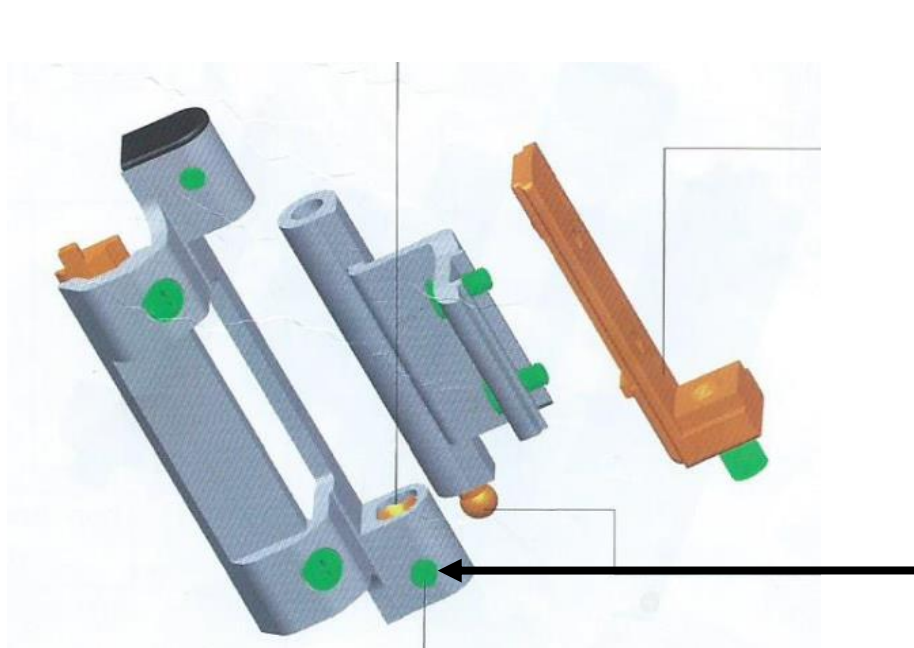

a) Adjusting the height of the shutter:

Open the shutter, find on hinge the 2 screws and loosen them without removing them with a Phillips screwdriver. Under the shutter with a 4mm Allen key, adjust the height of the shutter by screwing to rise the shutter and unscrewing to lower. Once the adjustment completed, tighten the two screws.

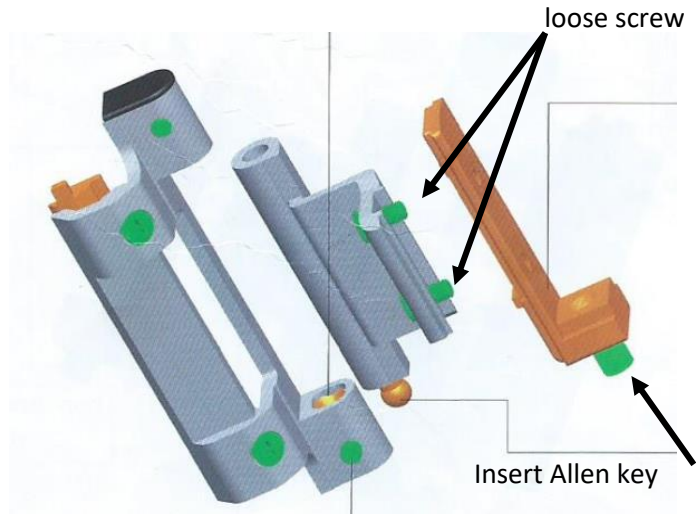

a) Adjustment of compression on side handle:

After opening shutter, find the buttons of the multipoint mechanism of the window (between 2 and 4 per shutter).


With a 4mm Allen key, guide the engraved line on the button outward if you want to facilitate the operation of the handle. We must guide this same trait inward instead if you want to improve the sealing of the window.



a) Compression adjustment for hinge side: with deflection limiter option

Open the shutter completely. Identifying the mechanism on the shutter hinge side, in the middle.

With a Phillips screwdriver, unscrew the two screws without removing them. Move mechanism inward to decrease the compression; or move it outward to increase tightness.

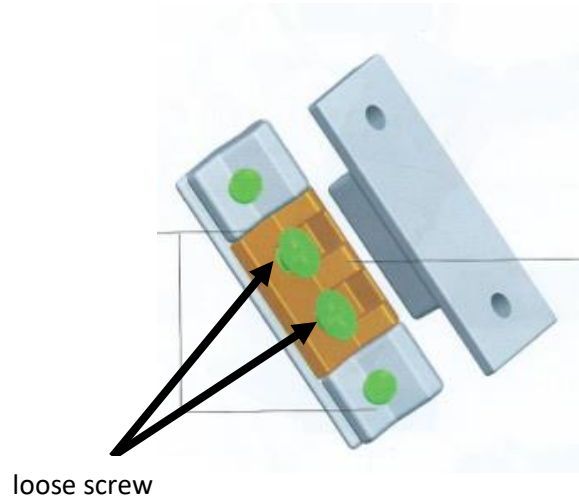

4. How to enable or disable the limited opening mechanism

In order to disable the mechanism, disassemble the two components, both rod and pivot, by removing the pivot rod. If it is not in line with the rod, take the Allen key 3mm to align.



For installation

**DO NOT USE CAULKING  
BUTYL BY TREMCO**

\* Not compatible with  
our glass suppliers

