

INSTALLATION PROCEDURE FOR PURE- DOUBLE OPERATING WINDOW


* * IMPORTANT: These are specific installation steps to our product. However, it is important to follow the guide and methods of the installations according to the existing building code requirement for each particular installation.

In order to not damage the product, a minimum knowledge of installation of windows and doors is required to perform the finishing adjustments presented in this guide. These adjustments do not rectify an incorrect installation.

Products from our puRE line must be installed using a laser level. * * *


- 1. Open the shutter to access the installation holes
- 2. Attach the window to the frame of the house, screwing in the pre-drilled holes, with # 10 screws requiring a minimum length of 3 " or more depending on the space between the background nailing and the window.
- 3. Adjust the shutter so that it is set square to the box frame
 - a) Top and bottom adjustment for left / right shutter:

Locate on hinges the hexagonal recess to insert a 3mm Allen key. Turn in clockwise direction to adjust the flap right or counterclockwise to adjust it to the left

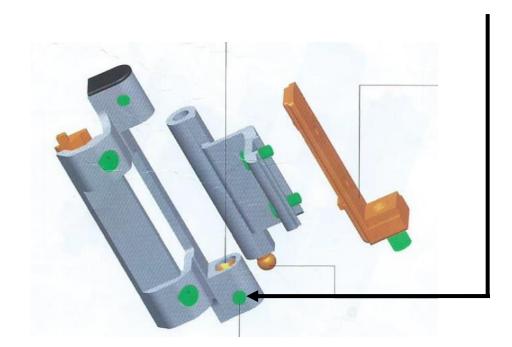


a) Adjusting the upper right / left shutter:

Open the shutter, locate the screw located on the mechanism at the top, insert the 4mm Allen key. Screwing (clockwise) movement will be towards the hinge; unscrewing (counter clock- wise), the displacement will be move more on the side of the handle.

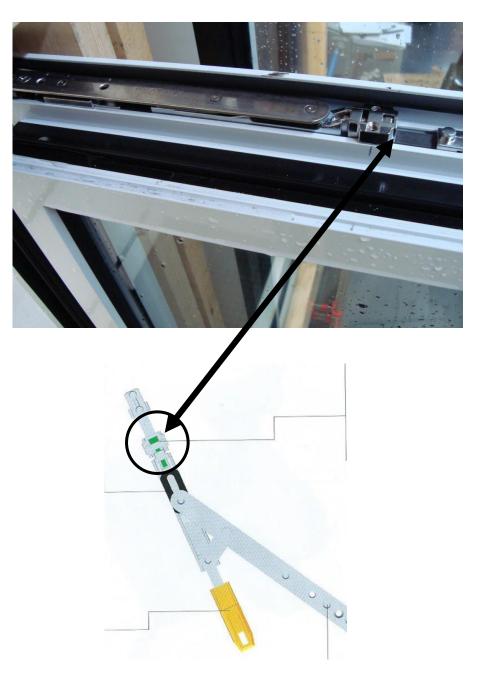

b) Adjusting the height of the shutter:

Open the shutter, find on hinge the 2 screws and loosen them without removing them with a Phillips screwdriver. Under the shutter with a 4mm Allen key, adjust the height of the shutter by screwing to rise the shutter and unscrewing to lower. Once the adjustment completed, tighten the two screws.

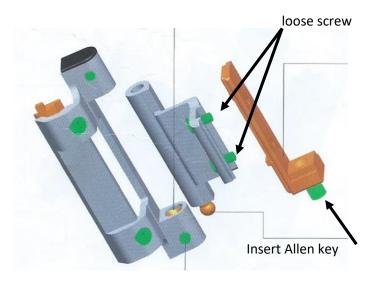

c) Adjustment of compression on side handle:

Optional adjustment (if required structural dimensions with criteria of C3): we must make the adjustment of knob on the side hinge alwell.

After opening pane, find the buttons multipoint mechanism of the window (2 per section).

With an Allen key 4 mm, guide the engraved line on the button outward if you want to facilitate the operation of the handle. We must guide this same engraved line inward instead if you want to improve the sealing of the window.



4. How to enable or disable the limited opening mechanism

> In order to disable the mechanism, disassemble the two components, both rod and pivot, by removing the pivot rod. If it is not in line with the rod, take the Allen key 3mm to align.



5. Fix the misuse prevention mechanism of the handle

Open the shutter in casement position

Locate on the top of the handle on the side of the shutter the mechanism

Align holes of the mechanism, over the marks previously made in factory

Take the fixing screws in the bag provided for this purpose. They are behind the Fabelta label . Fix the mechanism using screws and a 2.5mm Allen key.







